




Manual for Mixing Units

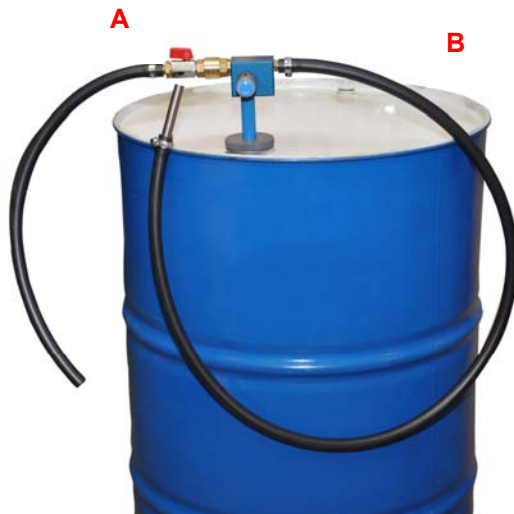

Mixing units can be installed on a canister or with a barrel lid screw connection on a barrel. However, it is possible to install special and mono mixing units on a variety of canisters, e.g. 5, 10, 20, 25 & 3. Then connect the hose **A**) (cut to any length) to the water inlet.

Likewise, the hose **B**) of about 1.50 m in length is mounted at the mixed liquid outlet.

Please make absolutely sure that this hose is not any longer as otherwise counterpressure will be generated in the mixing unit.

Then mount the connection pipes **C**) with the respective suction pipes at the concentrate inlets.

If canisters / barrels are used, the following connection pipes **C**) are used:

- C** 1 connection pipe for 5 l, 10 l
- C** 2 connection pipes for 20 l, 25 l, 30 l, 60 l Caragen
- C** 3 connection pipes for 200 l

For barrel mounting, attach the Mixing Unit at the barrel opening by means of the barrel lid screw connection and connect it to the suction pipe.

Then open the water faucet. This causes the concentrate to be suctioned and mixed in the Mixing Unit with the water flowing in to make the desired emulsion/solution.

Finally, regulate the concentration setting by opening or closing the needle valves and check the desired concentration using the refractometer.

